







Thule Rapid System Kit 1857

> Instructions

CHEVROLET Bolt, 5-dr Hatchback, 17-

OPEL Ampera, 5-dr Hatchback, 17-

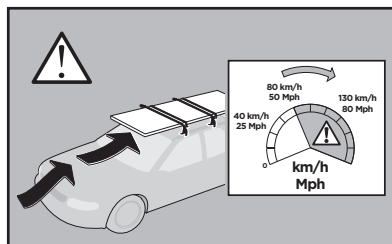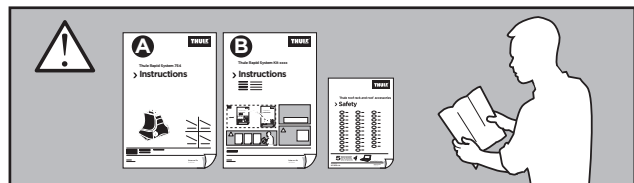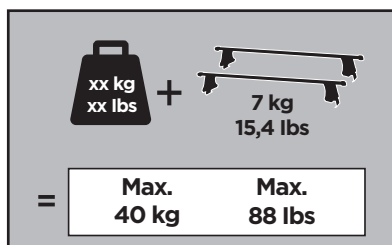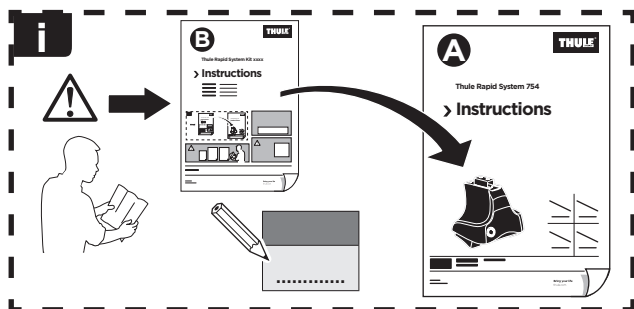

ISO 11154-E

141857
C.20170303
519-1857-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com




191 x1 ▶

192 x1 ▶

313 x1 ▶

314 x1 ▶



◀ 225 x2

◀ 666 x2






x1



x1

1

	X (scale)	X (mm)	X (inch)
CHEVROLET Bolt , 5-dr Hatchback, 17-	35,5	1006	39 ⁵/₈
OPEL Ampera , 5-dr Hatchback, 17-	35,5	1006	39 ⁵/₈

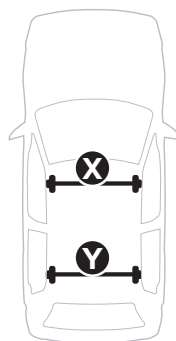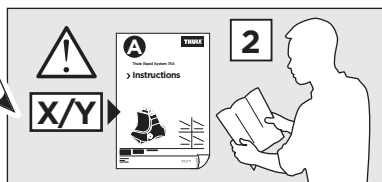
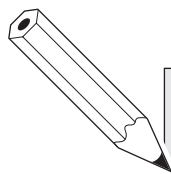


	Y (scale)	Y (mm)	Y (inch)
CHEVROLET Bolt , 5-dr Hatchback, 17-	33	981	38 ⁵/₈
OPEL Ampera , 5-dr Hatchback, 17-	33	981	38 ⁵/₈


2

CHEVROLET Bolt, 5-dr Hatchback, 17-

OPEL Ampera, 5-dr Hatchback, 17-

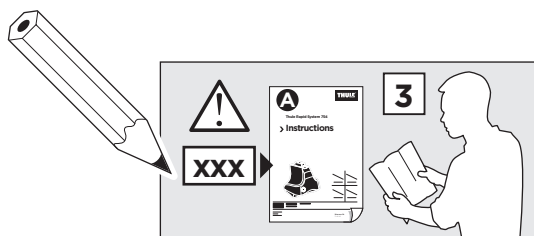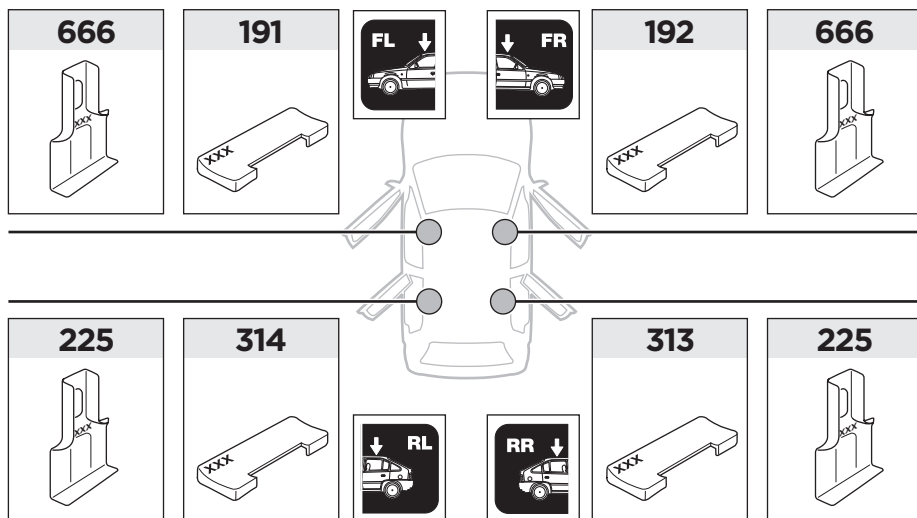

3

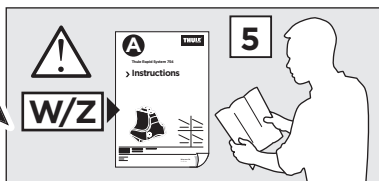

	W (mm)	Z (mm)	W (inch)	Z (inch)
CHEVROLET Bolt , 5-dr Hatchback, 17-	310	740	12 1/4	29 1/8
OPEL Ampera , 5-dr Hatchback, 17-	310	740	12 1/4	29 1/8

