



Thule XT Kit 3044

> Instructions

VW California, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-





VW Caravelle, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-

VW Multivan, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-

VW Shuttle, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-

VW Transporter, 4-dr Van, **(T5)** 03-15, **(T6)** 15-

This kit is only for vehicles with fixpoint mounting or T-profile.

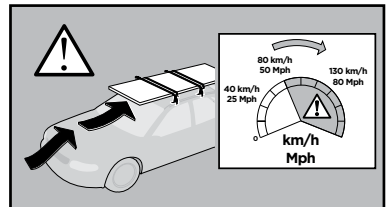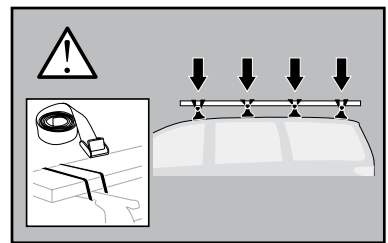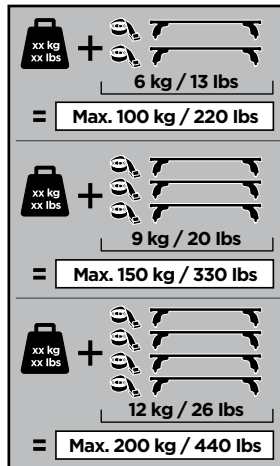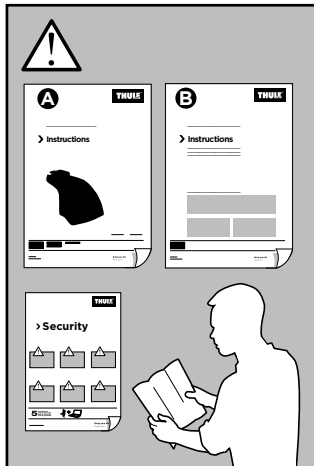










ISO 11154-E

183044



C.2015/0806
509-3044-04






Herbály Autó www.herbalyauto.hu









Bring your life
thule.com

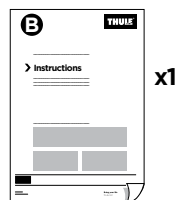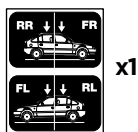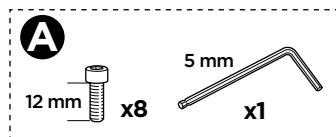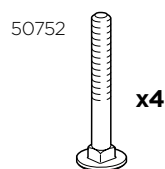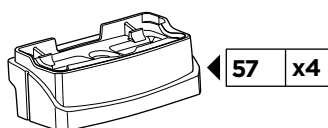







1

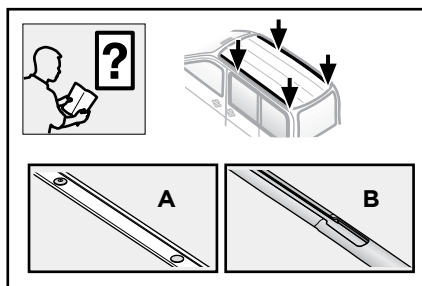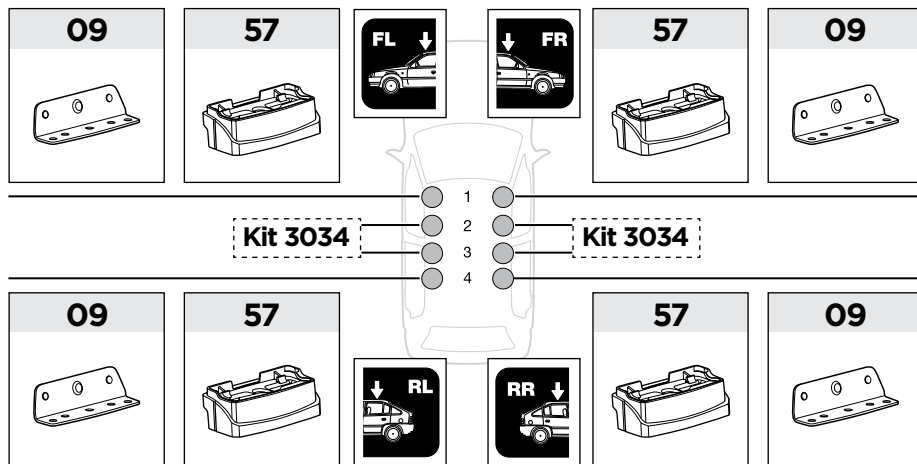

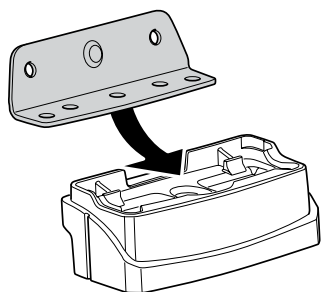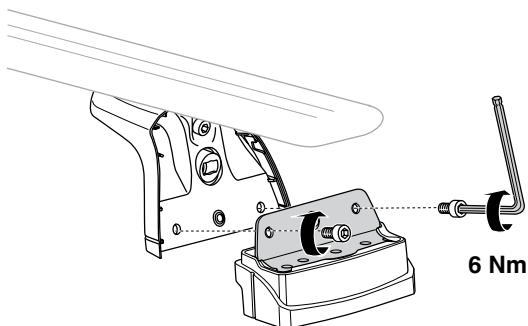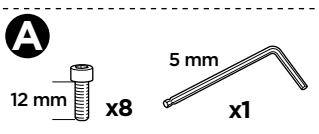

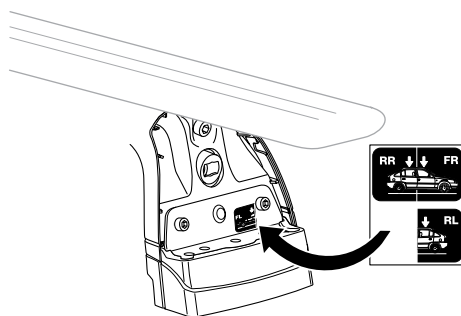
2**A****B****3****x1**

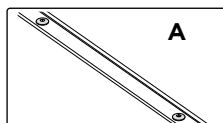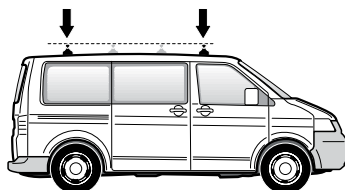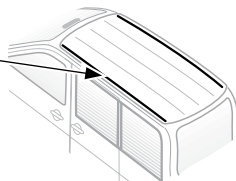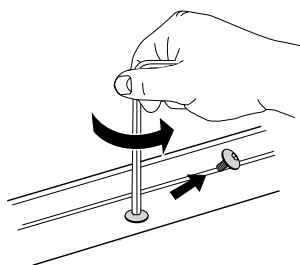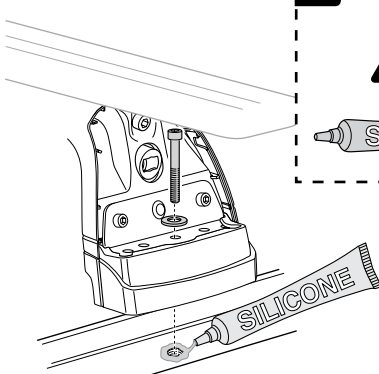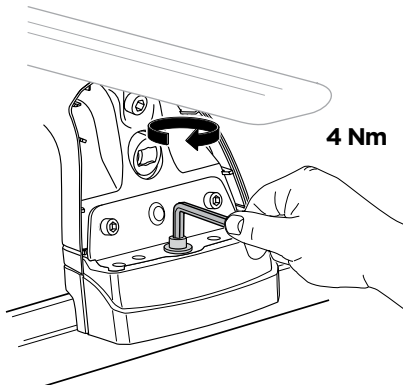4**x4****x4****A****5 mm****x1****A****A****B****i****C****4 Nm****D****6 Nm**


4

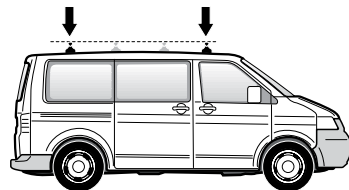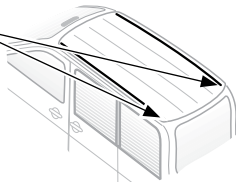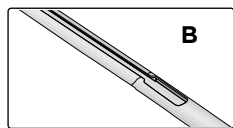


A

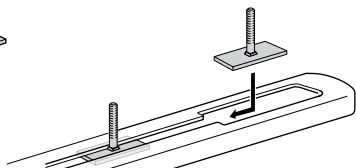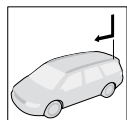

B

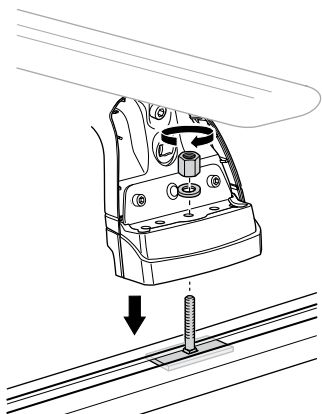

C

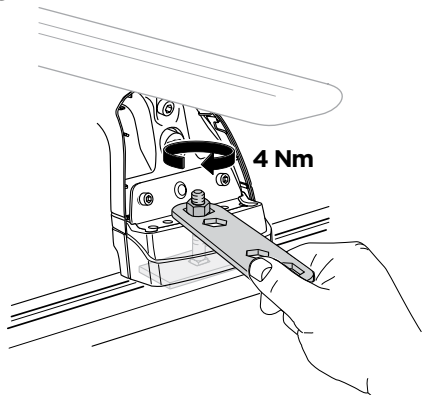

D

