



Thule XT Kit 3121

> Instructions

HYUNDAI H-1, 4-dr Van, 98-07

HYUNDAI Satellite, 4-dr Van, 98-07

HYUNDAI Starex, 4-dr Van, 98-07

RENAULT Express, 4-dr Van, 90-97

This kit is only for vehicles with fixpoint mounting.

The diagram illustrates the components and weight specifications for the Thule XT Kit 3121. It includes a warning icon, two instruction manuals (A and B), a security manual, and a silhouette of a person reading. Below this, three weight configurations are shown, each with a weight limit:

Configuration	Weight	Max. Weight
xx kg / xx lbs + 6 kg / 13 lbs	6 kg / 13 lbs	Max. 75 kg / 165 lbs
xx kg / xx lbs + 9 kg / 20 lbs	9 kg / 20 lbs	Max. 112 kg / 246 lbs
xx kg / xx lbs + 12 kg / 26 lbs	12 kg / 26 lbs	Max. 150 kg / 331 lbs

On the right, a speedometer diagram shows the recommended speed range for the kit, with a warning icon indicating a maximum speed of 80 km/h (50 mph).







ISO 11154-E

183121

C.20160226
509-3121-02



Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

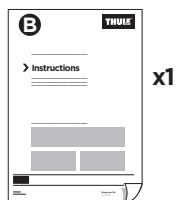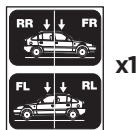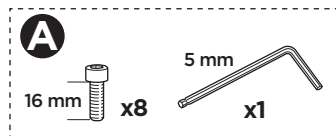
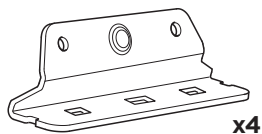


1


A

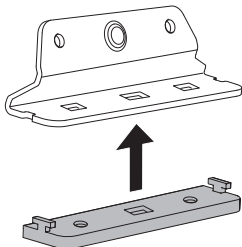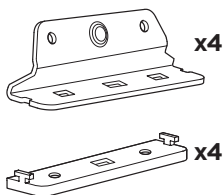

B



x1

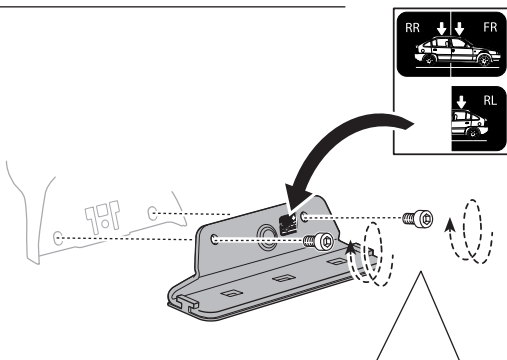

EN Only a few turns
DE Nur wenige Umdrehungen
FR Quelques tours uniquement
NL Slechts enkele slagen
IT Solo qualche giro
ES Sólo algunas vueltas
PT Noções básicas
SV Endast några varv
DK Kun nogle få omgange
NE Bare noen få omdreininger
FI Vain muutama kierros

ET Ainult mõni pööre
LV Tikai dažī apgriezieni
LT Tik keli pasukimai
PL Wystarczy kilka obrotów
RU Только несколько оборотов
UK Лише декілька обертів
BG Само няколко завъртания
CS Pouze několik otáček
SK Len niekoľko otáčok
SL Le nekaj obratov
HR/BiH Samo nekoliko okreta

RO Doar câteva rotiri
HU Csak néhány fordítás
EL Μόνο λίγες περιστροφές
TR Yalnızca birkaç tur

AR بعض دورات فقط


HE רק מספר סיבובים

ZH 仅几圈
JA 2～3回転のみ
KO 몇 번만 돌리면 됨
TH เพียงสองสามรอบ

2







GB If there is an interior roof lining, remove it before starting the installation procedure.
D Vor Montagebeginn muß ggf. das Innendach gelöst werden.
F Si l'habitacle comporte un pavillon séparé, le déposer avant de commencer le montage.
NL Als er een binnendak aanwezig is, maak dit dan los voordat u met de montage begint.
I Rimuovere l'eventuale modanatura interna del tetto prima di iniziare la procedura di installazione.
E Si hay un techo interior, soltarlo antes de empezar el montaje.
S Om det finns ett inmertak, lossa detta innan monteringen påbörjas.
FIN Jos autossa on sisäkatto, irrota se ennen asennuksen aloittamista.
EST Kui eksisteerib sisemine katusevooderdis, eemaldage see enne paigaldamisega alustamist.
PL Przed rozpoczęciem montażu usuń ewentualną spodnią część dachu samochodu.
RU В случае наличия на крыше декоративных накладок, перед началом установки их необходимо снять
CZ V případě, že vozidlo je vybaveno vnitřním stropem musí být tento před montáží odmontován.
SLO Pred pritirjevanjem odstranite notranjo strešno oblogo, če jo vozilo ima.
HU Abban az esetben ha a rögzítés helyén belső közbetétet találunk, azt a rögzítés előtt távolítsuk el.
한국어 내부 루프 라이닝이 있는 경우, 설치를 시작하기 전에 분리하십시오.
日本語 内側に屋根の裏張りがある場合は、取付手順を開始する前に取り外してください。

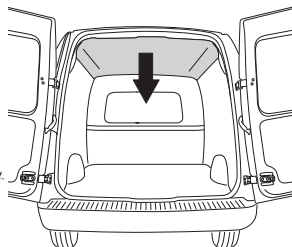

3

HYUNDAI

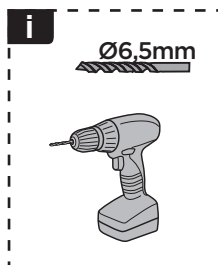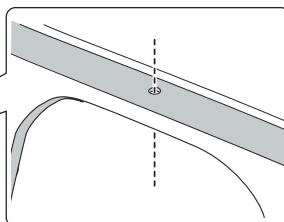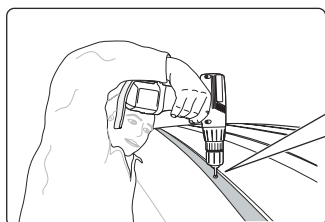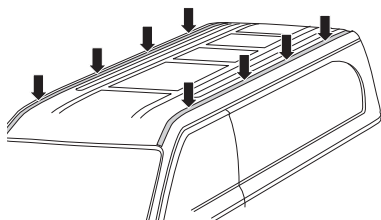

x4





x4














x4



x4

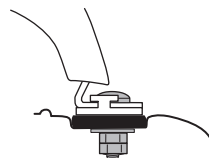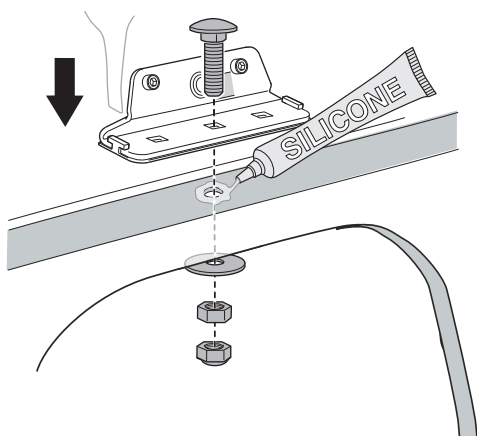

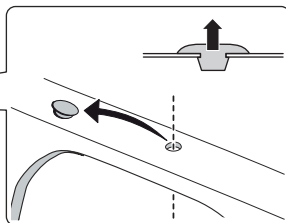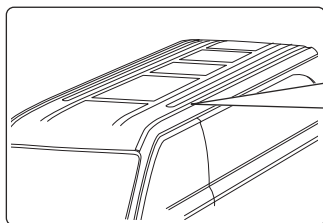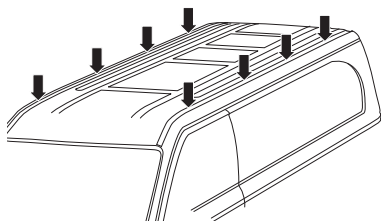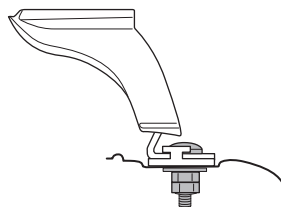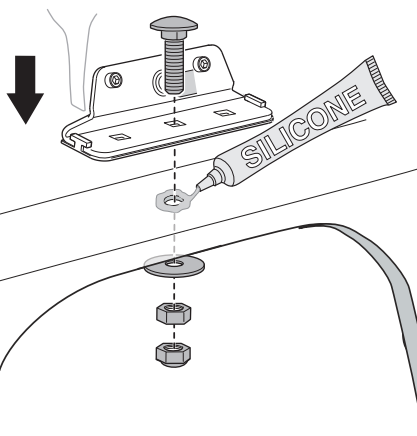3**FORD
RENAULT****x4****x4****x4****x4**

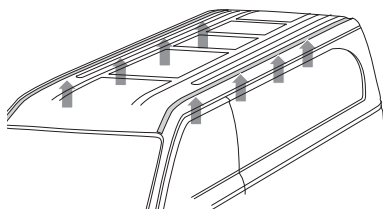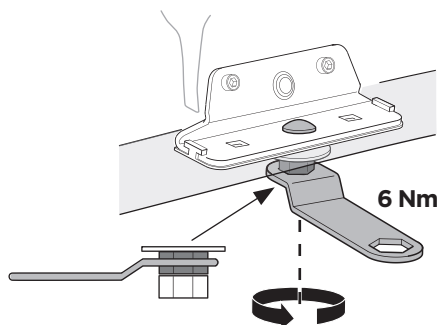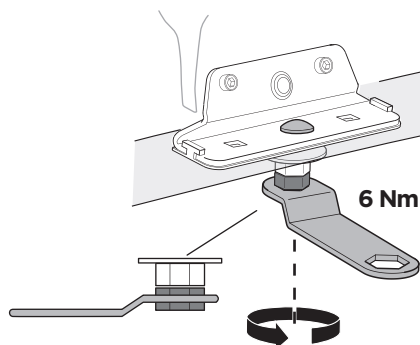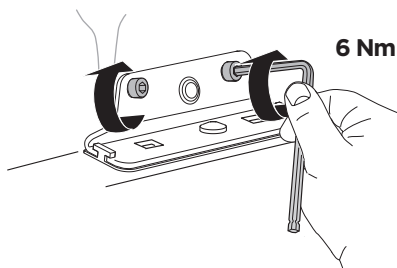4**A****B****5**

WW ▶  Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶  Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

 info@thule.com
 Phone: 800-238-2388

» PART OF THULE GROUP

Herbály Autó www.herbalyauto.hu



www.thule.com

509-3121-02