






Thule XT Kit 3140

> Instructions

FORD Transit Courier, 4-dr Van, 14-

This kit is only for vehicles with fixpoint mounting.

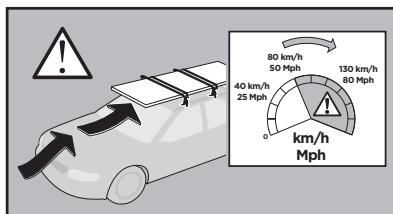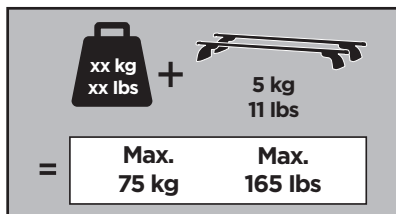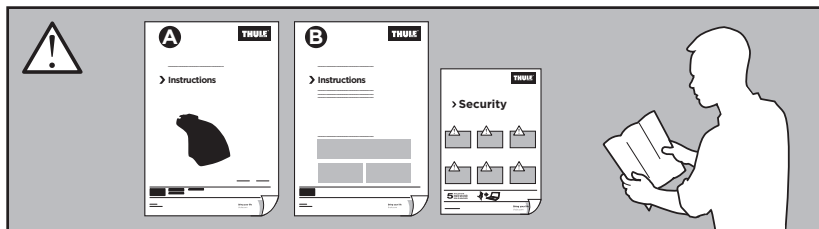



ISO 11154-E

183140


C.20170612
509-3140-02

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com

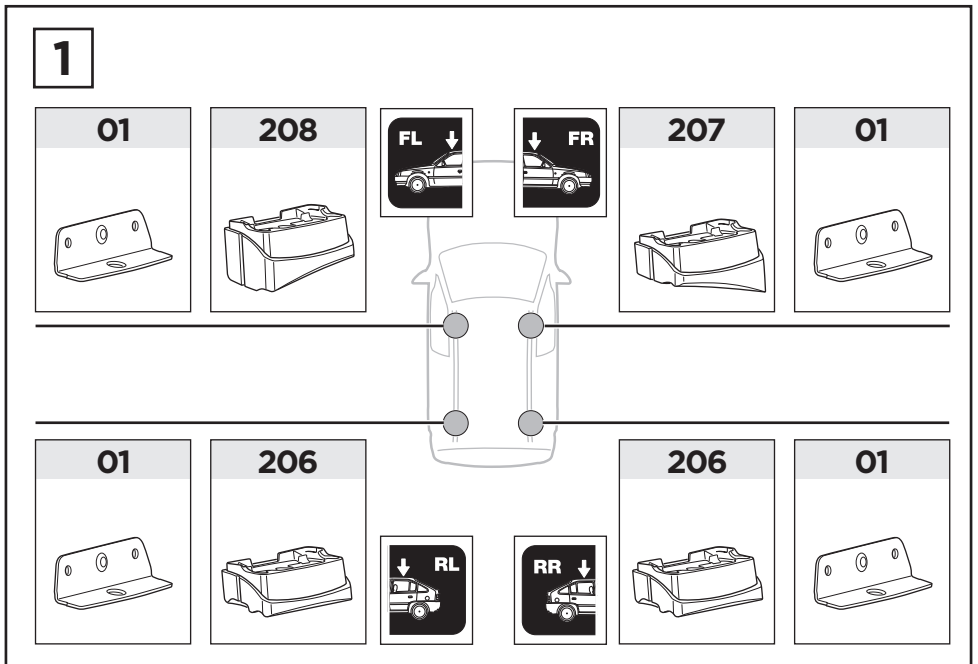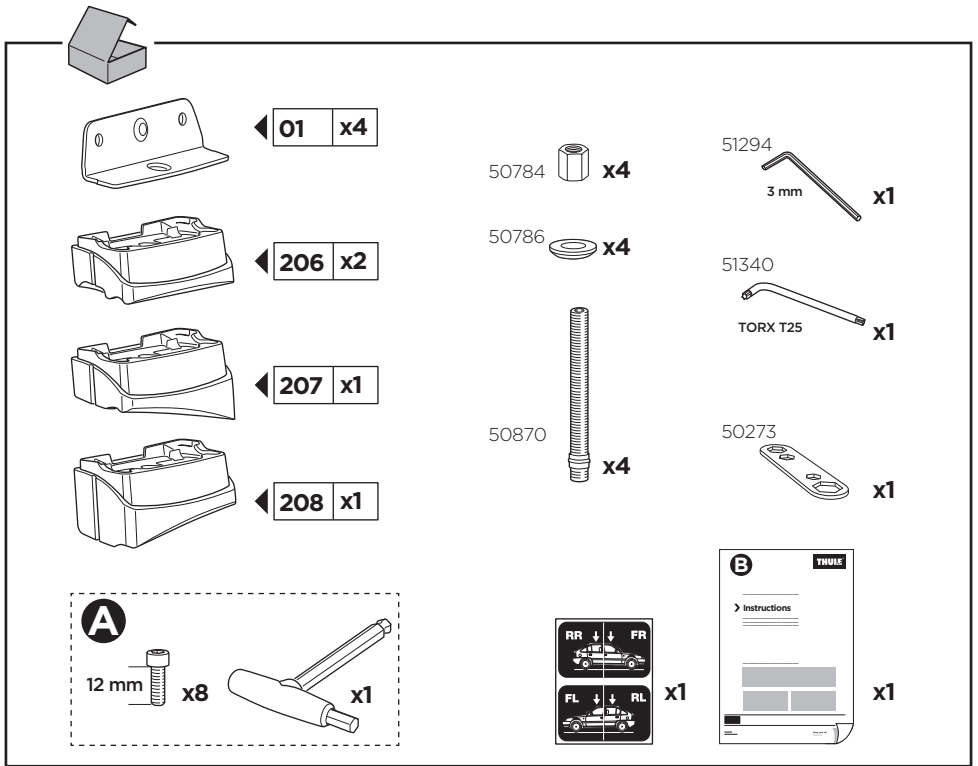

2

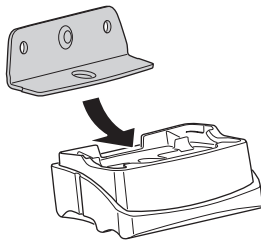


C

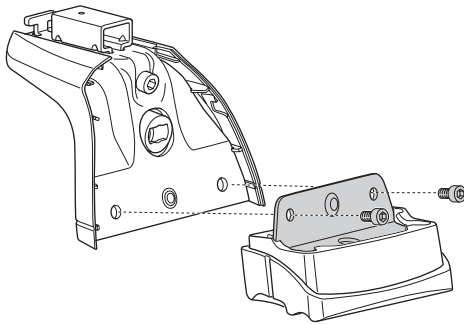


A


12 mm x8




6 Nm

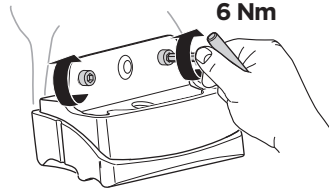


3




x1

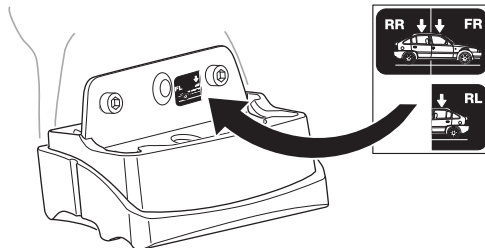


4




A

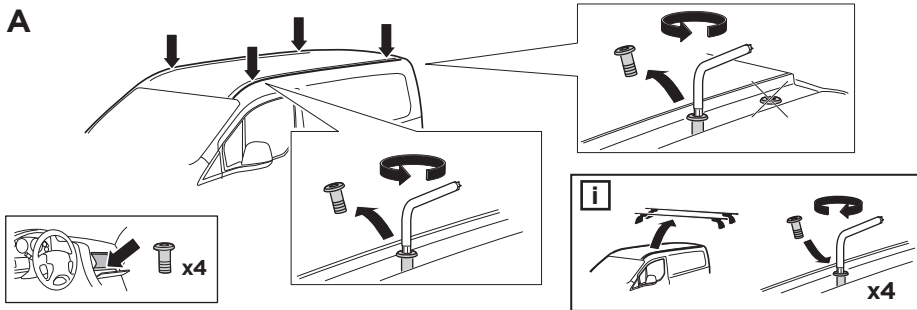


B

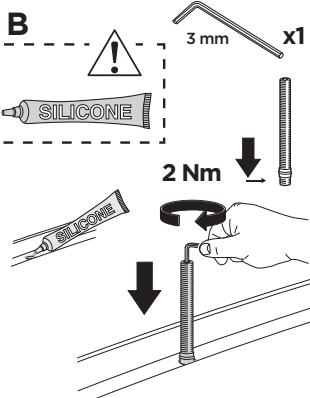

C

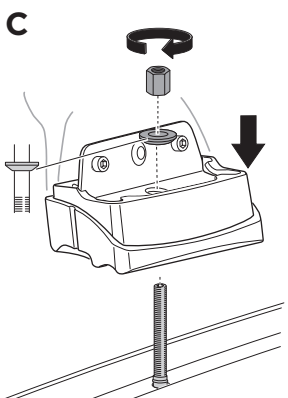

D

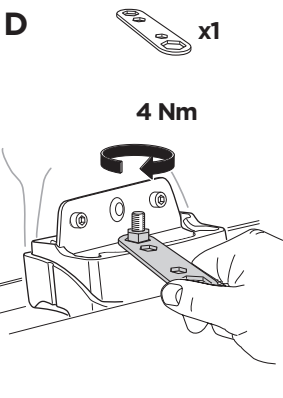

5

