

**THULE**
SWEDEN

Thule XT Kit 3021

> Instructions

DACIA Dokker, 4-dr Van, 12-
FIAT Doblo, 3-dr Van, 00-03, 04-05, 06-09
FIAT Doblo, 4-dr Van, 00-03, 04-05, 06-09
FIAT Doblo, 5-dr Van, 00-03, 04-05, 06-09
FIAT Doblo Maxi, 4-dr Van, 08-09
FORD Tourneo Connect, 5-dr Bus, 03-13
FORD Transit Connect, 4-dr Van, 03-13
MERCEDES Citan, 4-dr Van, 12-
NISSAN Kubistar, 5-dr Van, 97-09
RENAULT Kangoo, 5-dr Van, 97-07, 08-
RENAULT Kangoo Maxi, 5-dr Van, 10-

This kit is only for vehicles with fixpoint mounting.

The diagram illustrates the components and application of the Thule XT Kit 3021. On the left, the kit includes a warning triangle, two instruction manuals (751 FootPack and 753 FootPack), and a security manual. The middle section shows the weight capacity: 6 kg / 13 lbs for Max. 75 kg / 165 lbs, and 9 kg / 20 lbs for Max. 100 kg / 220 lbs. The right section shows the installation on a vehicle roof with three fixpoints and a speed limit diagram.

Warning: This kit is only for vehicles with fixpoint mounting.

Weight capacity: 6 kg / 13 lbs, Max. 75 kg / 165 lbs, 9 kg / 20 lbs, Max. 100 kg / 220 lbs.

Speed limit diagram: 80 km/h, 50 Mph, 130 km/h, 80 Mph, 40 km/h, 25 Mph, km/h, Mph.


ISO 11154-E

183021


C.20151008
509-3021-07

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com

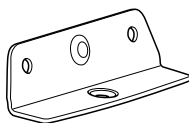

◀ **01** x4



◀ **26** x2

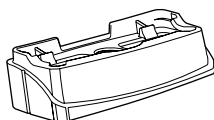

◀ **27** x2




751
FootPack

A



x8



x1




753
FootPack


A




x8




x1




x4




x4



x4



x1



x1












x1

1




753





FootPack

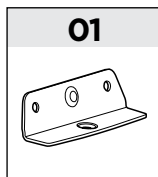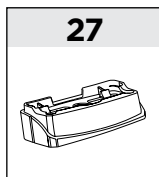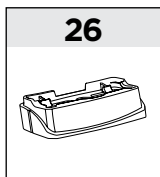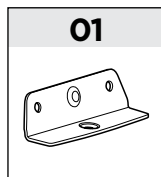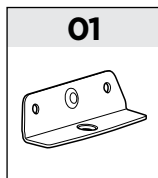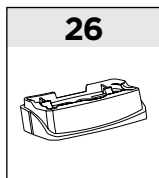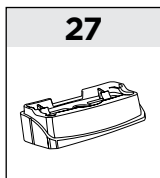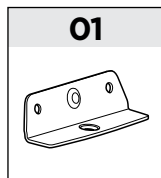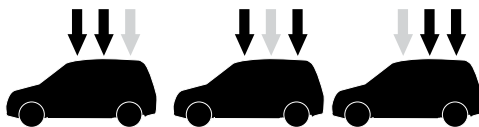

A

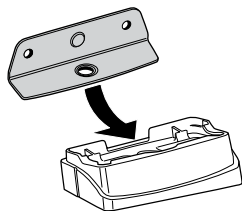

B

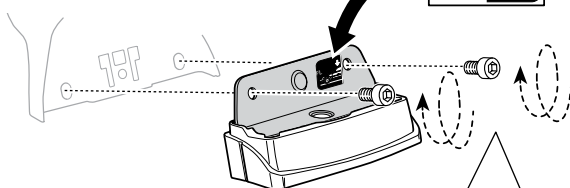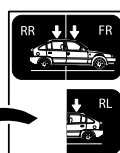

EN Only a few turns
DE Nur wenige Umdrehungen
FR Quelques tours uniquement
NL Slechts enkele slagen
IT Solo qualche giro
ES Sólo algunas vueltas
PT Noções básicas
SV Endast några varv
DK Kun nogle få omgange
NE Bare noen få omdreininger
FI Vain muutama kierros

ET Ainult mõni pööre
LV Tikai dažī apgriezieni
LT Tik keli pasukimai
PL Wystarczy kilka obrotów
RU Только несколько оборотов
UK Лише декілька обертів
BG Само няколко завъртания
CS Pouze několik otáček
SK Len niekoľko otáčok
SL Le nekaj obratov
HR/BIH Samo nekoliko okreta





RO Doar câteva rotiri
HU Csak néhány fordítás
EL Μόνο λίγες περιστροφές
TR Yalnızca birkaç tur

AR بعض دورات فقط
HE רק מספר סיבובים
ZH 仅几圈
JA 2～3回転のみ
KO 몇 번만 돌리면 됨
TH เพียงสองสามรอบ

1**751**
FootPack**753**
FootPack

RENAULT Kangoo Maxi









751 753 753

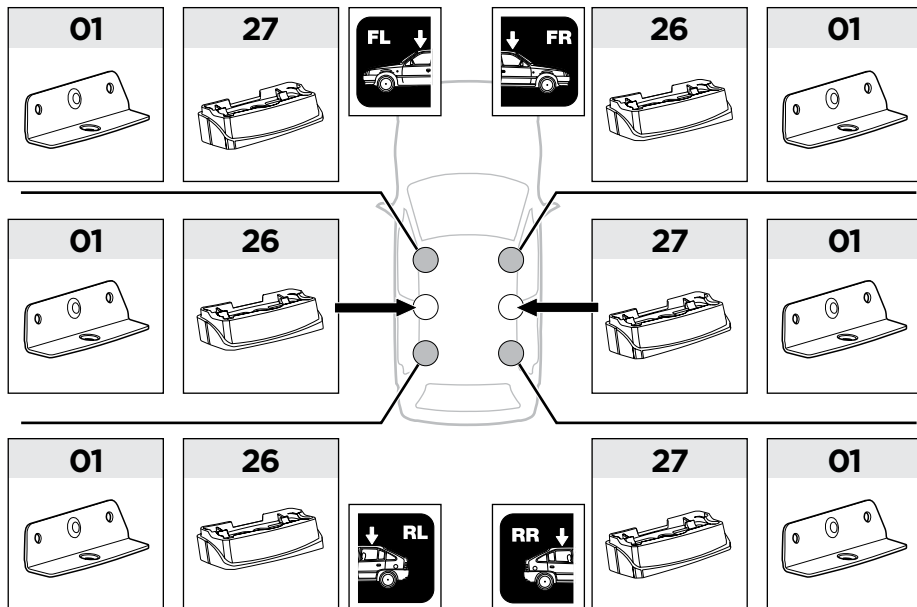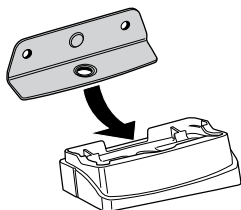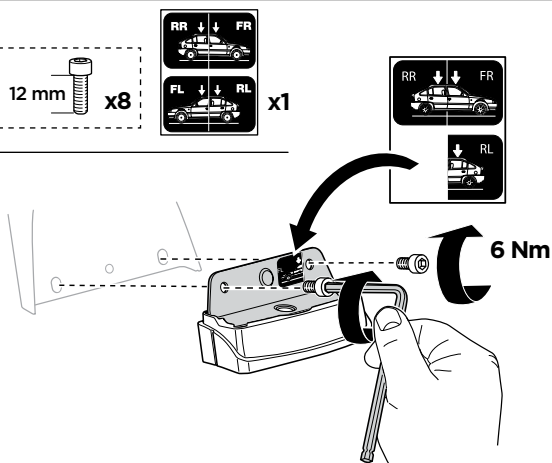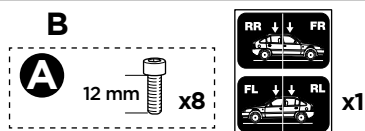**A****B**

1**751**
FootPack**753**
FootPack

DACIA Dokker


751 753 751

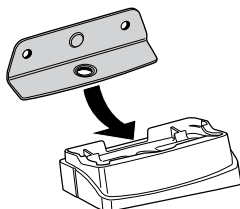**01****27****FL** ↓↓ **FR****26****01****01****26****27****01****01****26**↓ **RL****RR** ↓**27****01****A****B****A**



12 mm x8






x8




x1

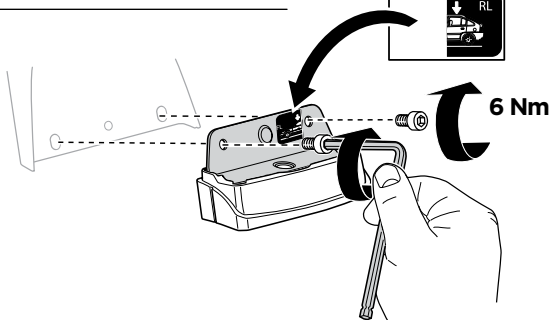


2 751 FootPack




A DACIA Dokker RENAULT Kangoo Maxi

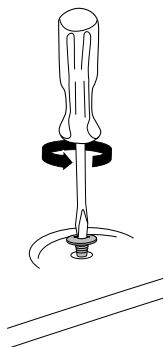



B

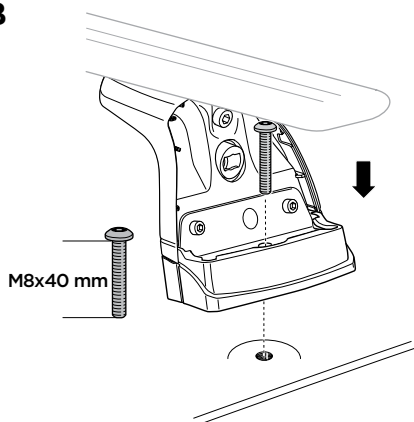






C

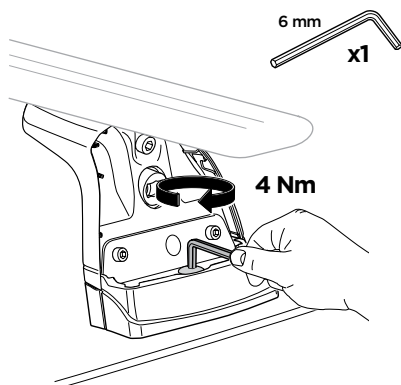


D

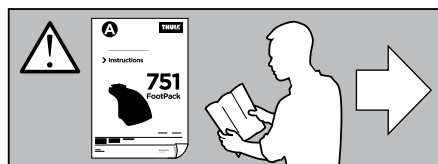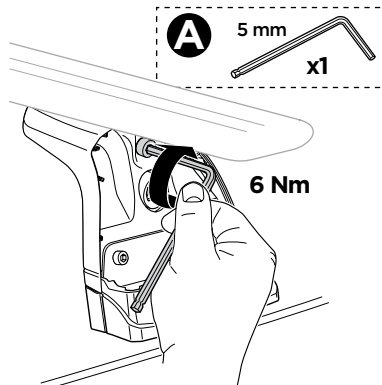

2 **753** FootPack

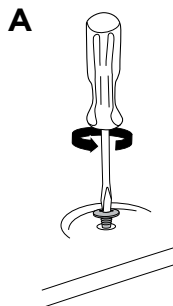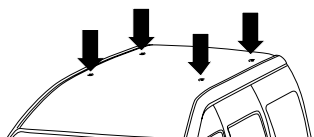


B FIAT Doblo, FIAT Doblo Maxi

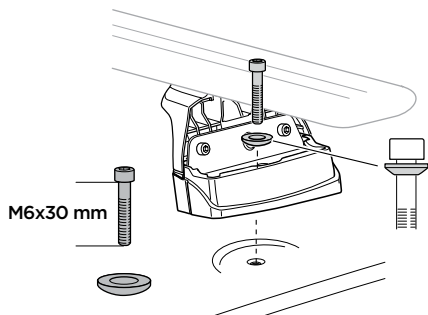


DACIA Dokker FORD Tourneo Connect FORD Transit Connect MERCEDES Citan



NISSAN Kubistar RENAULT Kangoo RENAULT Kangoo Maxi

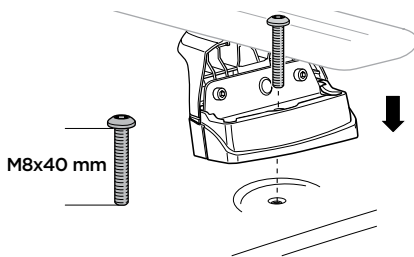



C FIAT



DACIA FORD MERCEDES NISSAN RENAULT

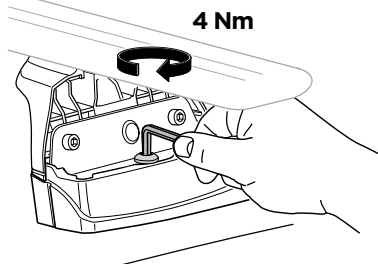

D

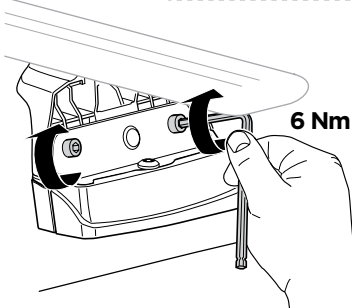

WW ▶
NA ▶



Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
Phone: 800-238-2388



www.thule.com

» PART OF THULE GROUP

Herbály Autó www.herbalyauto.hu 2014. All rights reserved.

509-3021-07