

**THULE**
SWEDEN

Thule XT Kit 3035

> Instructions

CITROËN C8, 5-dr MPV, 02-10

CITROËN Evasion, 5-dr MPV, 94-01

FIAT Ulyssé, 5-dr MPV, 94-01, 02-10





LANCIA Phedra, 5-dr MPV, 02-10

LANCIA Zeta, 5-dr MPV, 94-01

PEUGEOT 806, 5-dr MPV, 94-01

PEUGEOT 807, 5-dr MPV, 02-10

This kit is only for vehicles with T-profile.

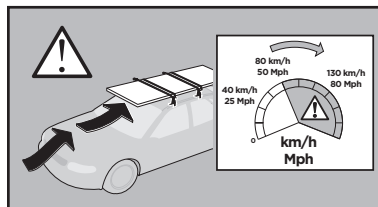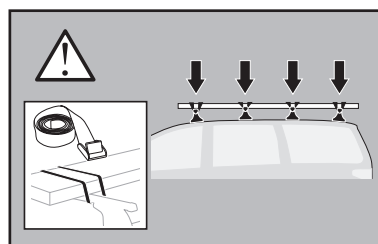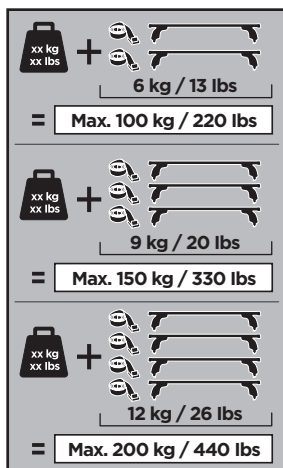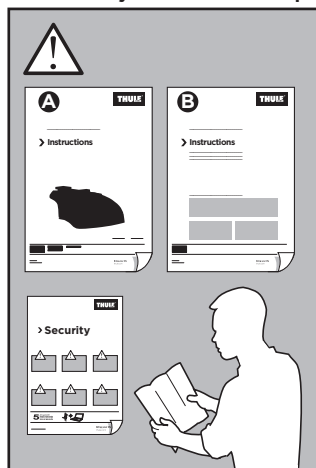



ISO 11154-E

183035


C.20130605
509-3035-03

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

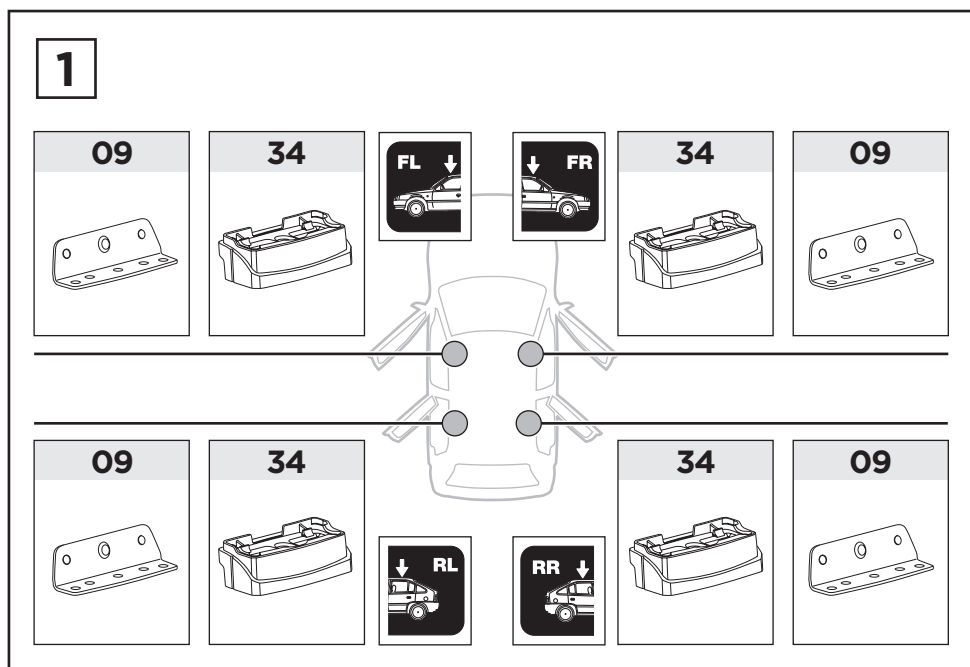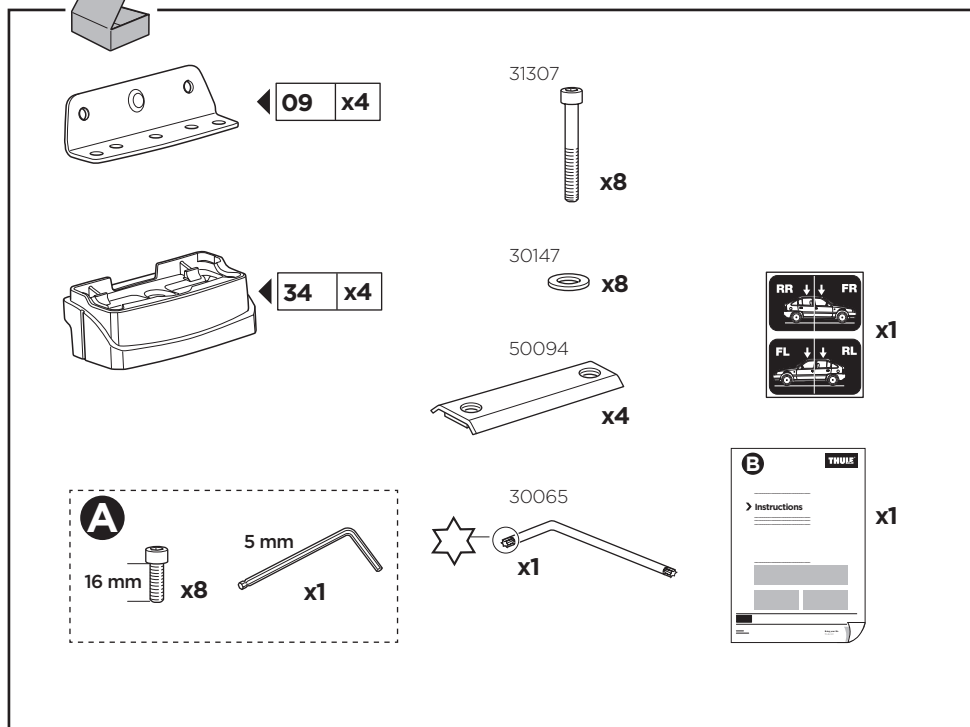


2 A


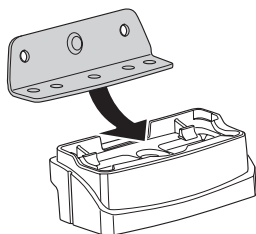


B

A 16 mm x8



x1

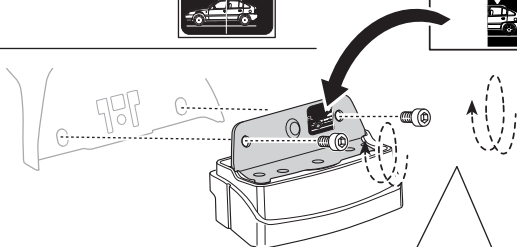

EN Only a few turns
DE Nur wenige Umdrehungen
FR Quelques tours uniquement
NL Slechts enkele slagen
IT Solo qualche giro
ES Sólo algunas vueltas
PT Noções básicas
SV Endast några varv
DK Kun nogle få omgange
NE Bare noen få omdreinger
FI Vain muutama kierros

ET Ainult mõni pööre
LV Tikai dažī apgriezieni
LT Tik keli pasukimai
PL Wystarczy kilka obrotów
RU Только несколько оборотов
UK Лише декілька обертів
BG Само няколко завъртания
CS Pouze několik otáček
SK Len niekoľ'ko otáčok
SL Le nekaj obratov
HR/BiH Samo nekoliko okreta

RO Doar câteva rotiri
HU Csak néhány fordítás
EL Μόνο λίγες περιστροφές
TR Yalnızca birkaç tur

بعض دورات فقط

AR

רק מספר סיבובים

HE

ZH 仅几圈

JA 2～3回転のみ

KO 몇 번만 돌리면 됨


TH เพียงสองสามรอบ

3




x8

x8





x4




x1


CITROËN C8, 5-dr MPV, 02-10
CITROËN Evasion, 5-dr MPV, 94-01
FIAT Ulyssé, 5-dr MPV, 94-01, 02-10
LANCIA Phedra, 5-dr MPV, 02-10
LANCIA Zeta, 5-dr MPV, 94-01
PEUGEOT 807, 5-dr MPV, 02-10

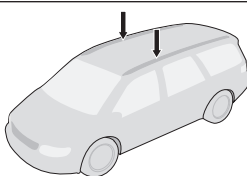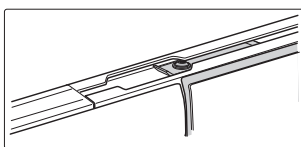

A

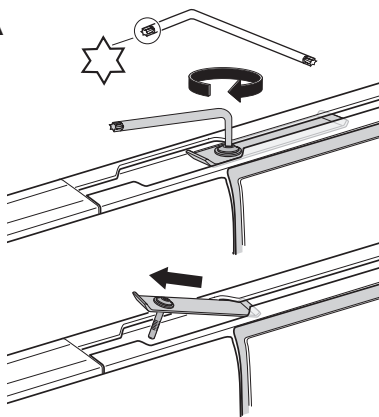

B

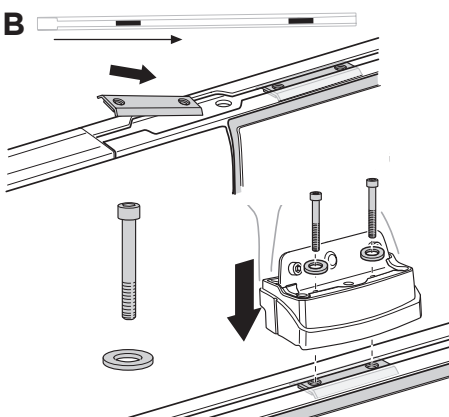


3



x8





x8




x4




PEUGEOT 806, 5-dr MPV, 94-01

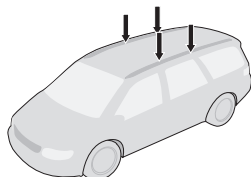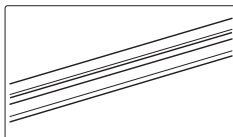


A 1.

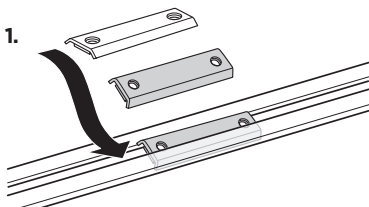

2.

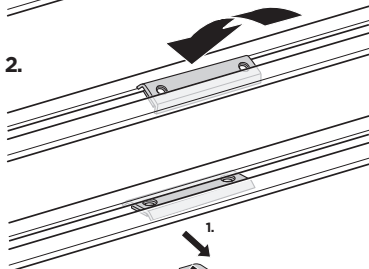

B

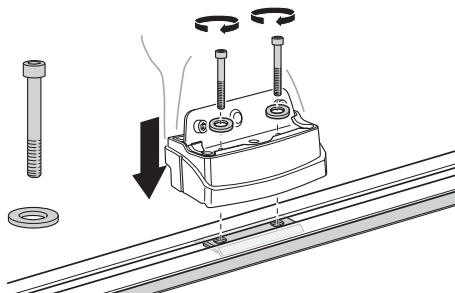


4

A


A

5 mm


x1



B

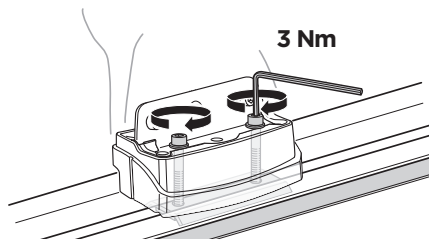

3 Nm

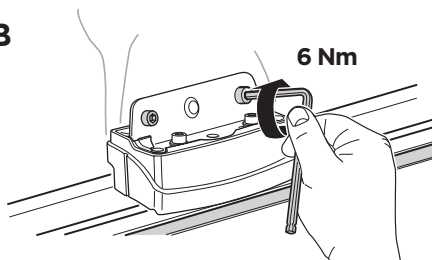

6 Nm

