







THULE
SWEDEN

Thule Rapid System Kit 1688

> Instructions

CHEVROLET S10, 4-dr Double Cab, 12-

ISUZU D-Max, 4-dr Crew Cab, 12-

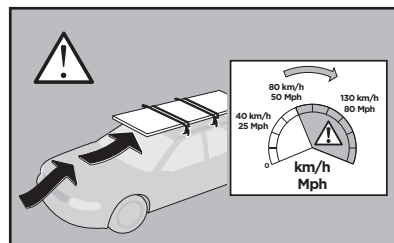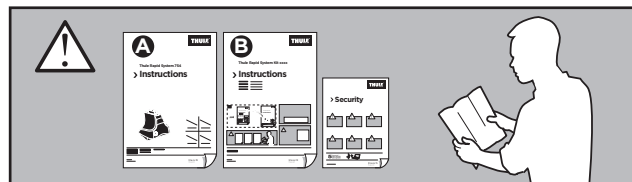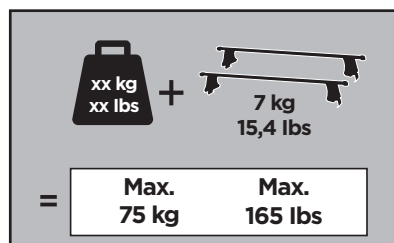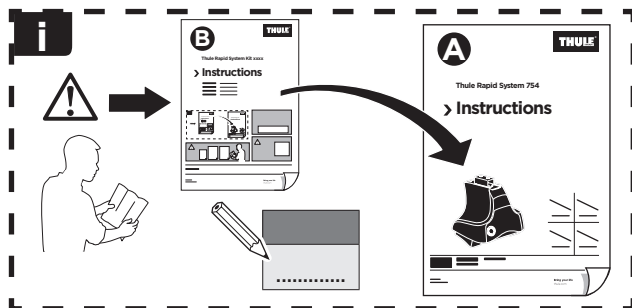


ISO 11154-E

141688



C.20130704
519-1688-02

Bring your life
thule.com

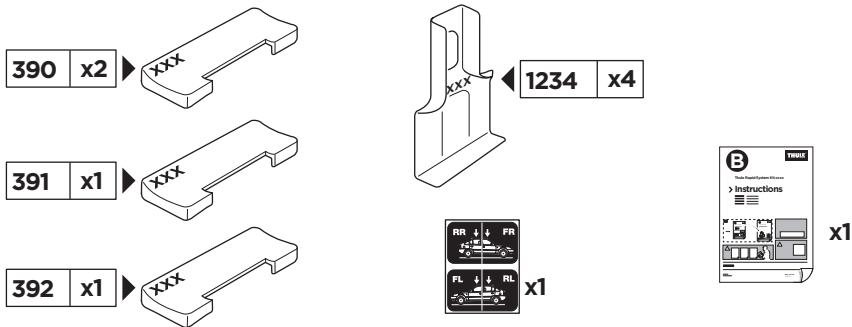

1



	X (scale)	X (mm)	X (inch)
CHEVROLET S10, 4-dr Double Cab, 12-	38	1031	40 ⁵ / ₈
ISUZU D-Max, 4-dr Crew Cab, 12-	38	1031	40 ⁵ / ₈

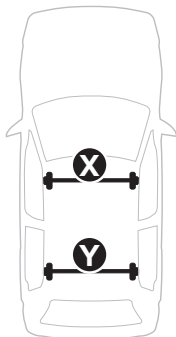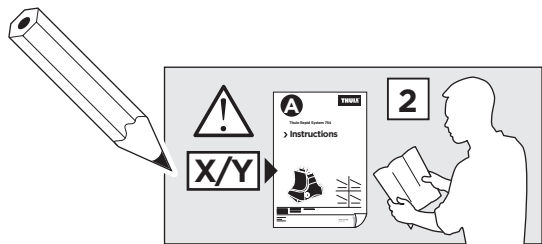


	Y (scale)	Y (mm)	Y (inch)
CHEVROLET S10, 4-dr Double Cab, 12-	35,5	1006	39 ⁵ / ₈
ISUZU D-Max, 4-dr Crew Cab, 12-	35,5	1006	39 ⁵ / ₈

2

CHEVROLET S10, 4-dr Double Cab, 12-
ISUZU D-Max, 4-dr Crew Cab, 12-

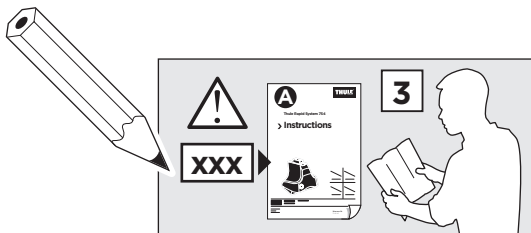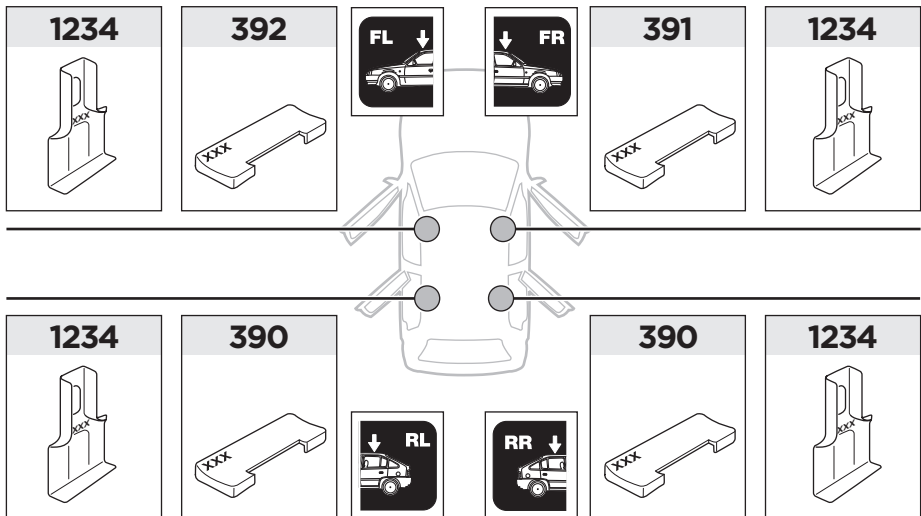

3

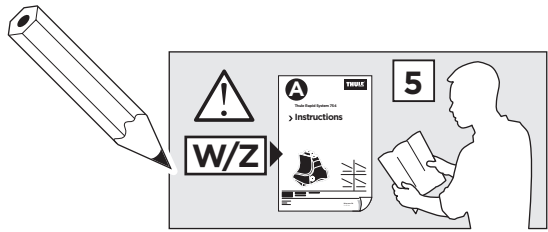

	W (mm)	Z (mm)	W (inch)	Z (inch)
CHEVROLET S10 , 4-dr Double Cab, 12-	250	700	9 ⁷/₈	27 ¹/₂
ISUZU D-Max , 4-dr Crew Cab, 12-	250	700	9 ⁷/₈	27 ¹/₂

