
Thule System Kit 126

ACURA Legend 4-dr, 91– (US) HONDA Legend 4-dr, 91–







Screw the load carrier into position alternating between the feet, and maintaining constant pressure on the bracket.








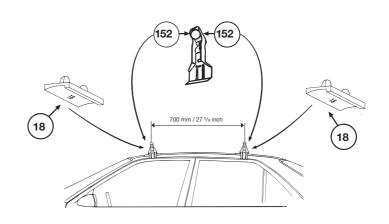

ACURA Legend Coupé 2-dr, 91- (US) HONDA Legend Coupé 2-dr, 91-







Screw the load carrier into position alternating between the feet, and maintaining constant pressure on the bracket.





